



## Shaker-Style DINING TABLE

### Cut list

\* Indicates parts are initially cut oversized.  
See instructions.

#### Materials:

C=Cherry

P=Poplar

#### Hardware:

$\frac{5}{16}$ " cherry dowel,

(12)  $\frac{3}{4}$ " washers,

(12) #8 x 2" washer head screws,

(4) #8 x 1 $\frac{1}{2}$ " f.h. wood screws

	Part	Qty.	T	W	L	Material	Rgh. ✓	Fin. ✓	Notes
A*	Top	1	1"	35"	63"	C			
B*	Breadboard end	2	1"	4 $\frac{1}{2}$ "	35"	C			
C*	Loose tenon	18	$\frac{1}{2}$ "	3"	2 $\frac{7}{8}$ "	P			
D	Foot	2	1 $\frac{1}{2}$ "	7 $\frac{1}{2}$ "	22 $\frac{1}{2}$ "	C			
E	Post	2	1 $\frac{1}{4}$ "	4"	19"	C			
F*	Stretcher	1	1"	4"	47 $\frac{3}{4}$ "	C			
G	Brace	2	1 $\frac{1}{2}$ "	1 $\frac{1}{2}$ "	30"	C			
H	Foot pad	4	1/2"	1 $\frac{7}{8}$ "	1 $\frac{13}{16}$ "	C			