



Cigar Tube Holder Kit

Product # 158709 Woodcraft Gold
158710 Gun Metal
158711 Chrome



General Instructions


Whether you're a novice turner or a pro, you'll find these projects are all quick and easy to make. Using cut-offs and shorts, the type everyone saves but doesn't know what to do with, you'll find yourself making handsome, custom woodturning projects which are great for gifts or for sale. The following is general in nature, please refer to the instruction sheet on the opposite side for specific dimensions and sizes for your project.

1. Cutting Blanks

Cut wooden blanks to the size specified in the enclosed instructions. For your safety, be sure that the blanks are solid and have no holes, checks or other defects.

2. Drilling Blanks

Center and bore a hole through your stock as specified in the Project Instructions on the opposite side. The center of the blank can be located at the intersection of diagonal lines, drawn from opposite corners. All holes are easily drilled using a clamp and a drill press (FIG. 1). Before you start to drill be sure that your blank is at 90° to the drill press table. You may also chuck and drill the stock on your lathe.

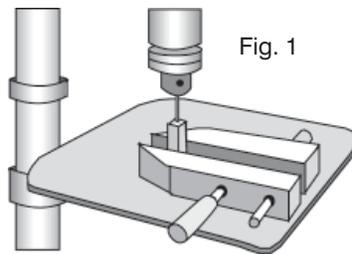


3. Gluing Blanks to Tubes

Rough the brass tube's surface with a fine grit sandpaper and use a quick drying CA type glue to secure the brass tubes into the blanks. Rotate the tube as you insert it to ensure maximum surface coverage of glue. If you find that CA glue is not providing adequate bonding, an alternative is any two part epoxy type glue.

4. Sanding Blanks to Length

Using a belt or disc sander, square the ends of the brass tube/wood blank. The blank should be flush with the brass tube on both ends. Care should be taken to not sand into the tubes (FIG. 2). If any excess glue remains inside the tubes it should be gently scraped out.

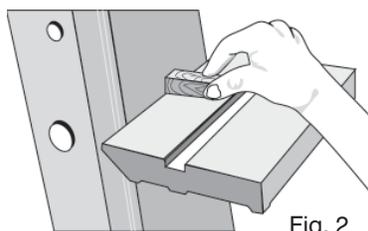

5. Mandrel Preparation

Woodcraft's new Pen and Pencil Maker's Mandrel system allows you to turn a variety of small projects without requiring the purchase of a unique, special mandrel each time. The only item you will need to purchase to turn new projects is the specially designed bushing set for the project of your choice. The mandrel is provided with either a #1 Morse Taper (141468) or a #2 Morse Taper (141469). If you prefer to use the mandrel in a three jaw chuck, simply loosen the Morse Taper set screw and slide the Morse Taper off of the shaft. Now the mandrel shaft may be mounted directly in your three jaw chuck. With the bushing sets specified on the project instruction sheet, mount your wood blanks and bushings as depicted for each project. With the mandrel mounted in your lathe, slide a bushing onto the mandrel, followed by a wood blank and a second bushing or spacer as required, followed by the second wood blank if required. With the wood blanks installed on the mandrel, secure the wood blank/bushing assembly using the washer and retaining nut provided. Bring up a live center in the tailstock to support the threaded end of the mandrel. Do not over tighten the tailstock or the mandrel will flex and bend causing oval shaped turnings.

6. Turning Blanks

Place your tool rest parallel and as close as possible to the blank. Rotate the blank by hand to ensure it will not touch the tool rest when the lathe is turned on. Using a turning speed of approximately 1,000 RPM begin turning the blank to a diameter slightly larger than the bushings. You can work the stock down to just short of the desired design or diameter by carefully scraping or sanding.

7. Finishing the Blanks

Blanks can be finished like any other wood project. Using a fine grit sandpaper, sand the blank until it is flush with the bushing for parallel sided projects or until the desired profile is obtained for custom projects. Use a wood filler, if desired, to fill any grain openings in the blank. Final sanding with a wet/dry paper will create a blank which is glass smooth. *Tip: We have found that use of Micro Mesh sanding paper (145982) after wet/dry sanding creates a perfect, glass smooth finish.*

8. Assembly

All parts should fit together as depicted in the parts diagram for each project. In some cases a pen press or machinists vise will be needed to completely press the parts together. Protect all plated parts from scratching by covering them with a cloth or thin pad before placing them in a vise. Proceed carefully, many of the kit components are delicate and uneven or excessive pressure will cause permanent damage.



Cigar Tube Holder Kit

Product # 158709 Woodcraft Gold
158710 Gun Metal
158711 Chrome

1. Cutting Blanks

Cut two 1 1/8" x 1 1/8" blanks. Due to the diameter of the bore required we recommend that you add approximately 3/4" of length to the blanks. The Upper Barrel (Cap) will need to be 3 1/4" long. Lower Barrel (Body) will need to be 5" long

2. Drilling Blanks

To help prevent splitting of the blanks during the drilling process we recommend that you mark the length of the tubes plus 3/16" on your blanks and mark a line. Using a letter "O" bit, drill a hole lengthwise through the center of the blank to the line previously drawn. With the blank still secured in your vise follow the same steps as above using a 21mm brad point bit. Follow the same steps for the remaining barrel. Once drilled saw the blanks off at the line drawn in the previous steps.

3. Gluing Blanks to Tubes

See General Instructions for details.

4. Sanding Blanks to Length

See General Instructions for details.

5. Mandrel Preparation

The bushing set (158712) contains four bushings of the same diameter so placement is not critical. To begin slide one of the bushings onto the mandrel with the lip facing the tailstock followed by the Upper Barrel (Cap), ensure that the blank seats completely against the shoulder. Next slide another bushing on the mandrel with the lip facing towards the headstock and ensure

that it seats completely against the shoulder. Follow the above steps for installing the remaining two bushings and Lower Barrel (Body). Make sure that the lips of all of the bushings are seated firmly inside their respective barrels. Install the washer and brass nut on the mandrel securing the bushings and barrels.

Do not over tighten the brass nut or damage may occur to you mandrel.

6. Turning the Blanks

See General Instructions for details.

7. Finishing the Barrels

See General Instructions for details.

8. Assembly

Upper Barrel (Cap)

Begin the assembly process by pressing one of the End Caps (A) into one of the open ends of the Upper Barrel (B) followed by pressing the Threaded Cap End (C) lip end first leaving the threads exposed. Finish the assembly of the Upper Barrel by installing the rubber O-ring (D) by gently rolling it over the threaded portion of the Threaded End Cap until it seats just past the threading.

Lower Barrel (Body)

Press the remaining End Caps (A) into one of the open ends of the Lower Barrel (F) followed by pressing the Threaded Coupling (E) into the other end. Thread the two halves together and you now have the ultimate transportation vessel for your favorite cigar.

