



Salice Futura Drawer Slides Installation Instructions

Product #s
160780, 160781, 160782, 160783, 160784, 160785, 160786

Installation Instructions

Rating	75 lbs. Dynamic, 100 lbs. Static	Certification	ANSI: Grade 1
Type	Undermount, full extension; soft close & push to open		
		Drawer box length = 15" (381mm)	
		Drawer box length = 18" (457mm)	
		Drawer box length = 21" (533mm)	

1 Calculate the cabinet depth

Drawer box length	Minimum interior cabinet depth		Maximum interior cabinet depth	
	With metal socket		With metal socket	
15" (381mm)	15 7/8" (403mm)		17 7/16" (442mm)	
18" (457mm)	18 7/8" (479mm)		20 3/8" (518mm)	
21" (533mm)	21 7/8" (555mm)		23 3/8" (594mm)	

2 Calculating the drawer box size

Drawer side thickness range	Minimum thickness	15/32" (12mm)
	Maximum thickness	5/8" (16mm)

Calculation for outside drawer width

Drawer side thickness	5/8" (16mm)	19/32" (15mm)	9/16" (14mm)	1/2" (13mm)	15/32" (12mm)
Deduct from opening size	3/8" (9mm)	7/16" (11mm)	1/2" (13mm)	5/8" (16mm)	21/32" (17mm)

Calculating drawer box height

Drawer bottom recess:	1/2" (13mm)
Deduct from opening for drawer side height:	1" (25mm)



3 Machine back notch & assembly hook hole (1/4" (6mm)) hole as shown.

4 Assemble front mounting clips as shown. Left and right

5 Assemble rear mounting socket (if applicable) as shown.

Metal socket			
--------------	--	--	--


6 Assemble drawer slide to cabinet. Note: Important 5/32" (4mm) setback from cabinet front edge. Drawer slide accepts # 6 wood screws, which are included in the package. Push to open: An 1/8" gap is needed between the back of the drawer front and the face of the cabinet to open the drawer.

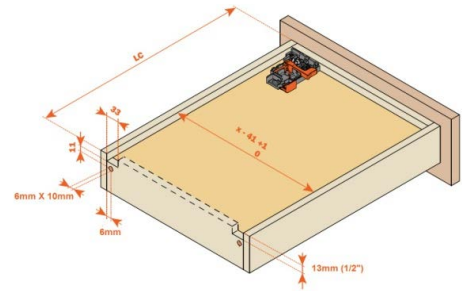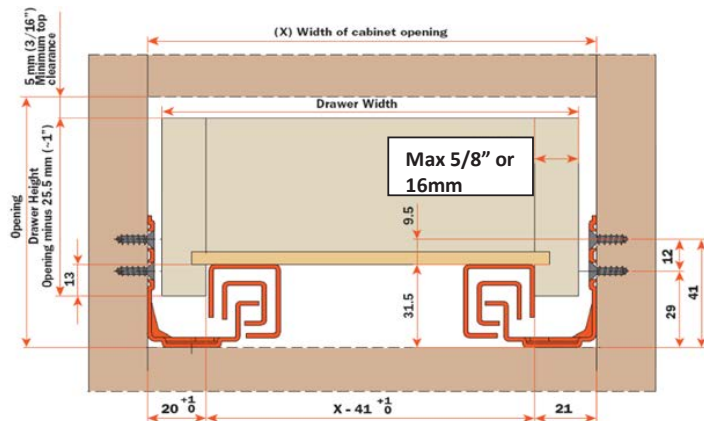


Drilling template



Drawer back detail

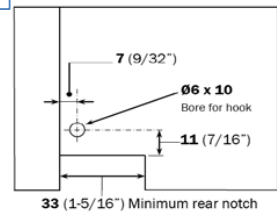

Front clip detail

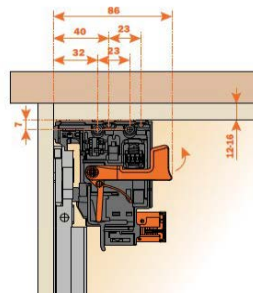

6x Adjustments



Height adjustment




Lateral adjustment



Depth adjustment

5/32" (4mm) setback from edge

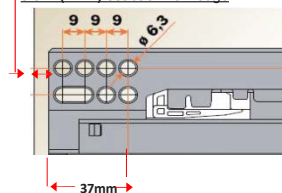

Location of the slide from the front edge of the cabinet

Metal rear socket position

